

## **INDUSTRIAL NOISE SERIES**

# PART III: NEAR-FIELD NOISE

Elden F. Ray June 10, 2013

### **TABLE OF CONTENTS**

Near-Field Sound Level	2
Where Is the Criterion?	2
Where and What Is the Source of Noise?	3



#### **NEAR-FIELD SOUND LEVEL**

The immediate area around equipment is called the near field. The near-field sound is of course the sound in that area; usually specified to be measured 3 feet or 1 meter from the equipment at 5 feet or 1.5 meters above grade (typical range of ear height). This also applies to structures and ducting to address breakout noise; that is, noise that comes through walls.

First, there are no regulations limiting the near-field sound level; it is whatever the owner or developer determines. Frequently, a sound level limit of 85 decibels (dB) is cited, but this limit does not come from U.S. OSHA (see Part X). OSHA<sup>1</sup> regulates worker noise exposure, not the sound level. OSHA states that when the eight-hour time-weighted averaged (TWA) sound level equals or exceeds 85 dB the owner/operator shall institute a hearing conservation program, and to avoid this expense, the sound level around equipment is usually limited to 85 dB and at 85 dB the owner/operator must still institute a hearing conservation program.

#### WHERE IS THE CRITERION?

It is important to understand the application of imposing a near-field sound limit and where it is applicable. When applied to complex arrangements each position or location requires a unique amount of silencing. The following illustration shows various near field locations.

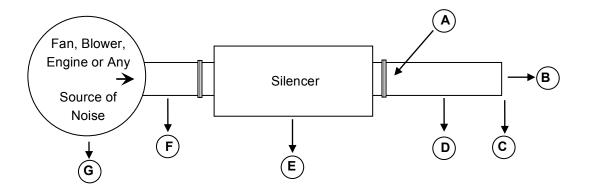


Figure 1 - Inlet, Exhaust or Vent Silencer Arrangement Showing Criterion Locations

The connecting ducts or pipes on either side of the silencer can be very long.

The following table identifies the type of noise at each location identified in Figure 1.

<sup>&</sup>lt;sup>1</sup> General Industry Standards, U.S. code of federal regulations (CFR), Title 29 Part 1910 Section 95, Occupational Noise Exposure

Table I - Type of Near Field Noise

Location	Type of Noise
Α	Airborne noise inside duct
В	Airborne noise radiating directly off the opening
С	Airborne noise radiating off to the side of the opening
D, E, F	Breakout noise through (duct) walls
G	Machine noise that can include self ventilation and breakout noise

The sound level at locations A, B, C & D is controlled by the amount of silencing. The breakout noise is controlled by the duct wall size and construction. The sound level around the machine depends on many factors and the supplier of the machine may have to provide specialized noise mitigation features.

Be aware that many machine suppliers measure the near field sound level about their equipment under no-load conditions, which does not reflect actual field usage.

#### WHERE AND WHAT IS THE SOURCE OF NOISE?

Figure 1 shows that diligence is needed to clearly understand and specify how the sound limit applies. A sketch can easily answer and clarify a lot of questions and particularly if the sound exiting the open end of the duct is elevated and well away from an area that could be occupied by personal. The distance from the open end of the duct to where the sound limit applies can be used to the advantage of reducing the amount (and cost) of silencing.



888.300.4272 solutions@universalaet.com www.universalaet.com

#### About B&W Universal

B&W Universal delivers on one simple yet powerful promise – to provide the highest quality, complete air management solutions. With more than a half-century of industrial and power generation experience, we engineer solutions to our customers' unique needs and back them with unparalleled support, across the entire energy generation lifecycle. Your comprehensive single-sourced solution not only meets environmental, regulatory and operational requirements, but also helps you reduce costs, improve the efficiency of your equipment and eliminate safety and compliance risk. We put our expertise to work solving problems for your specific needs. The result: Your world. Clean. Quiet. Safe.